

Beatles (All Editions)

Installation

Please remove the following parts

1. Flipper left
2. Flipper right
3. Upper flipper right
4. Outlane Plastics (2x)
5. Slingshots (2x) – disconnect cables for the flashers under the playfield
6. Bumper caps (3x)
7. Plastic left side
8. Plastic behind the target bank

Before



After



PLAYFIELD PROTECTORS

FULL PROTECTION FOR YOUR PINBALL MACHINE



Remove the protective foil of the rear side -then put the playfield protector on the playfield.



Now you can reinstall everything just in the reverse sequence..

Finally the turntable and the drop target banks have to be adjusted.

Turntable – Loose the marked screw to adjust the position of the turntable.

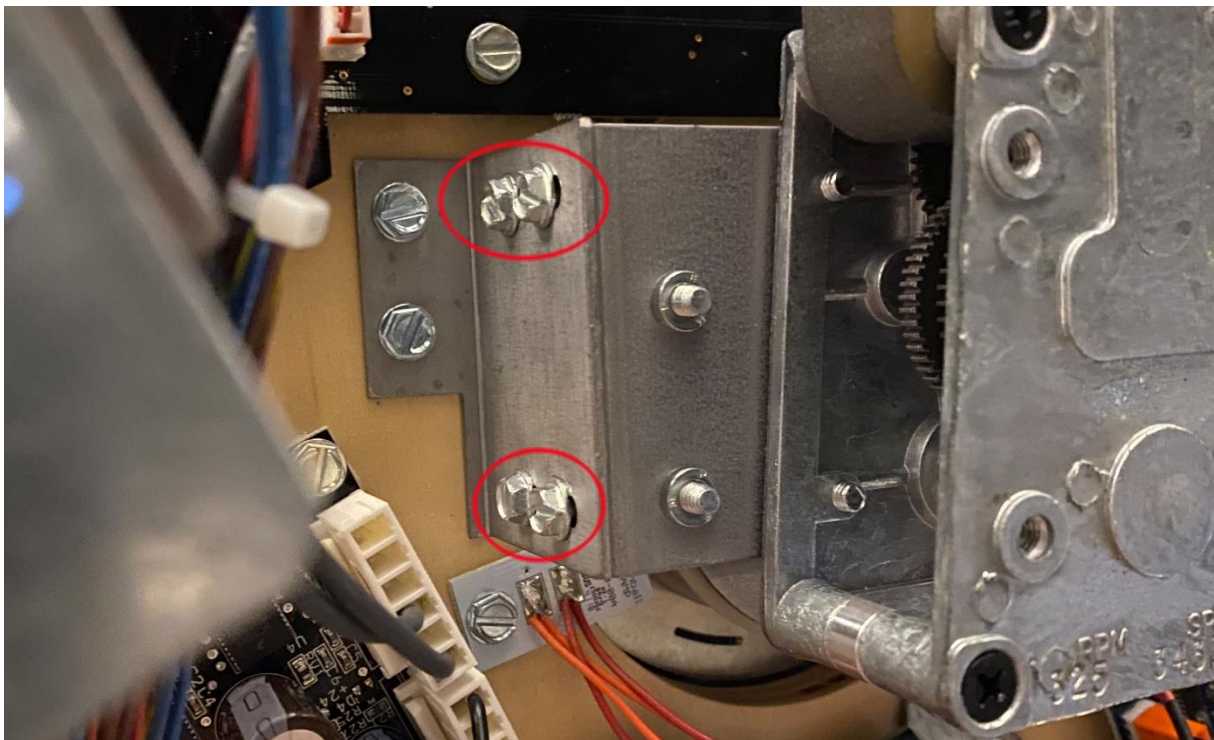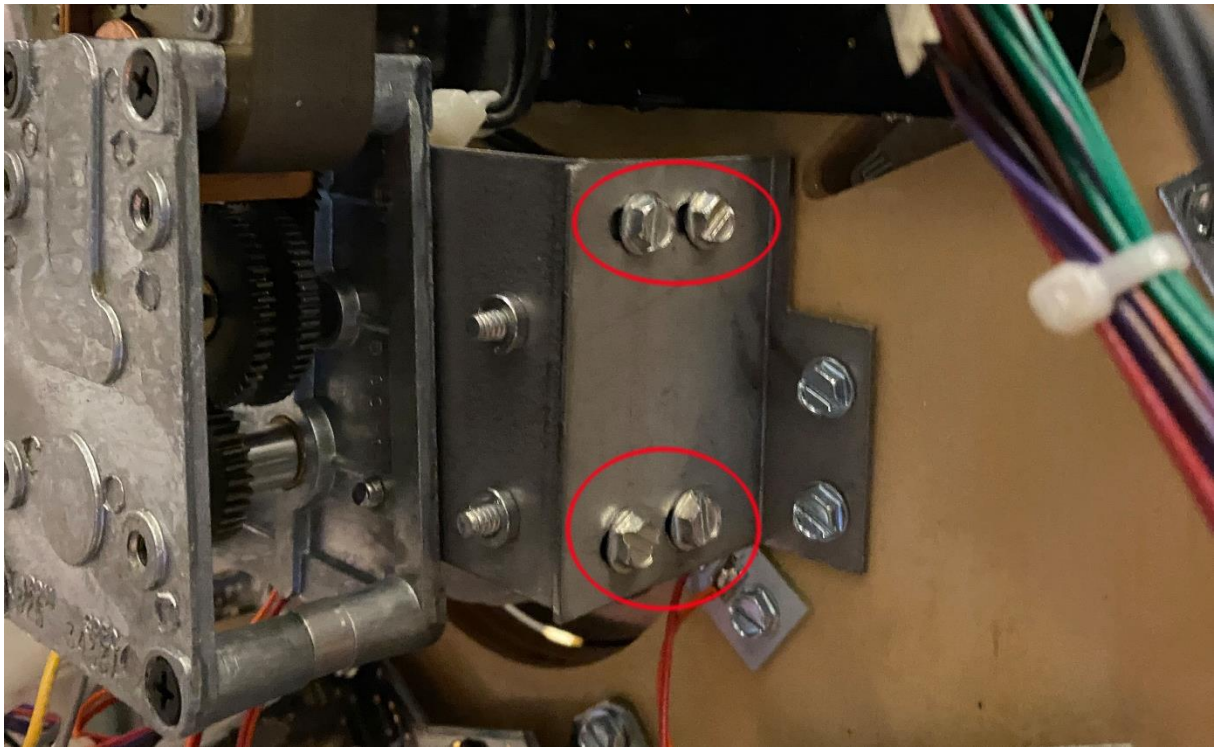

PLAYFIELD PROTECTORS

FULL PROTECTION FOR YOUR PINBALL MACHINE

The drop target banks have the be adjust to level it with the installed protector. In order the do that please use the marked screws at the target banks.

