


Jurassic Park (Premium Edition)

Installation


Please remove the following parts

- 1. Flippers (x3)
- 2. Outlane Plastics (x2)
- 3. Slingshots inclusive rubbers (x2)

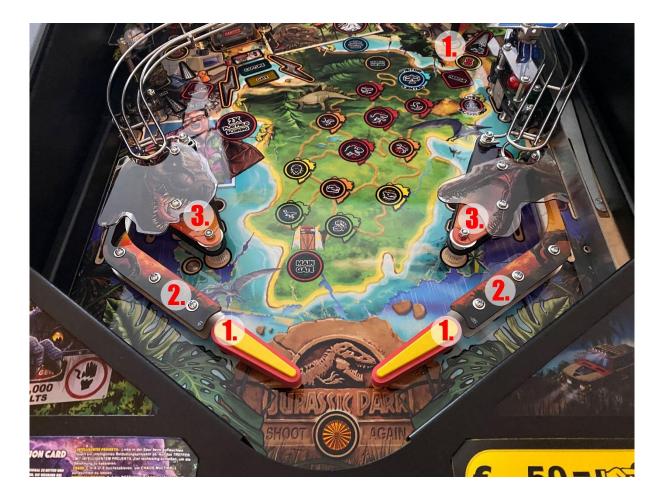




Remove left ramp

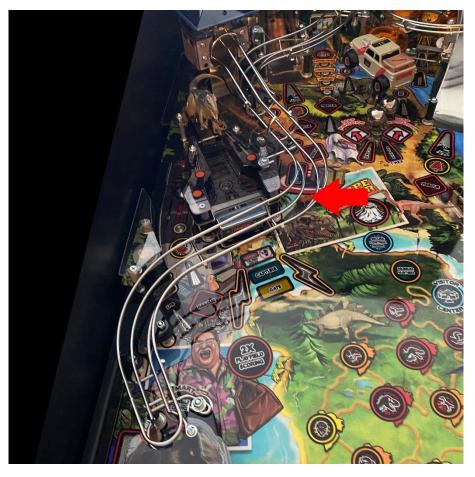


Loose the right ramp. In order to do this unfast the nut and the screw at the slingshot. The protector must be installed under the ramp at the slingshot.

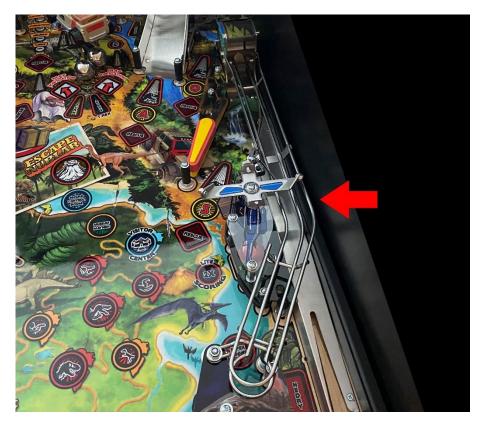




FULL PROTECTION FOR FOUR PINBALL MACH

Remove the upper right ramp and the spiral ramp.

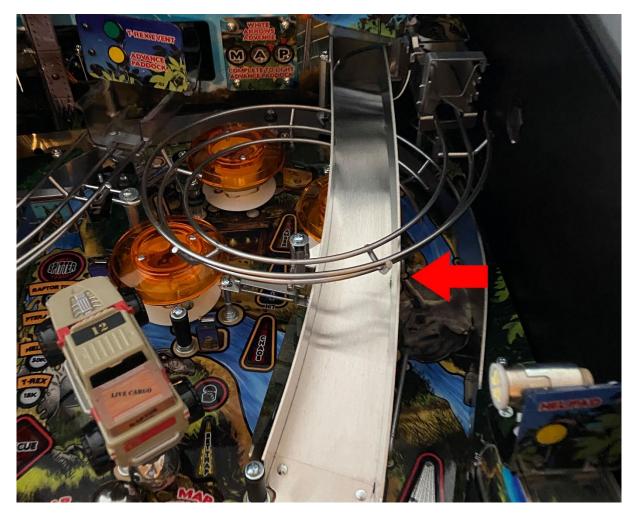

Unfasten both nuts of the flap under the playfield. Unplug both connectors and pull them out. Both ramps can be removed together – you don't need to separate them.

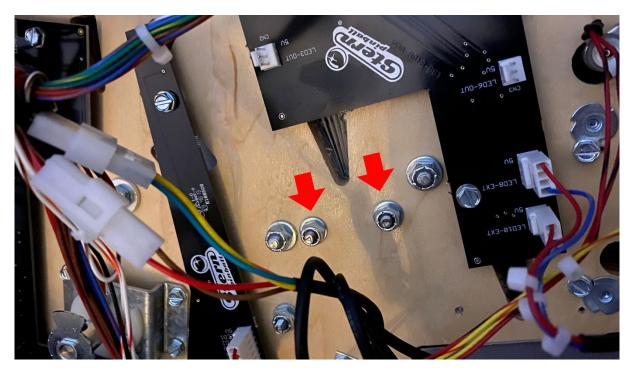

Uninstall the jeep – the Jeep is on a spindle. Loose the socket screw (under the playfield), but do not take it out completely – then carefully pull out the Jeep

Attention! There are two washers and a mount on the spindle!

Please pay attention that there is some back slash (approx.. 1-2 mm) installing the Jeep, so that the Jeep can be turned easily. To test this properly the playfield must be in the playing position.







Remove the bumper caps and the gate



The raptor plastic must be removed completely. Attention – there are two level. Four connectors must be unplugged.





Uninstall the T-Rex Rampe together with the backboard. First you remove the clear plastic then both optos. After that unbolt the screw at the flap.






The ramp is connected to the backboard with two screw – please remove them. Attention! Each of the has a short sleeve.







Unbolt the backboard. The are two screws on the left and two on the right side plus one under the backboard in the center.

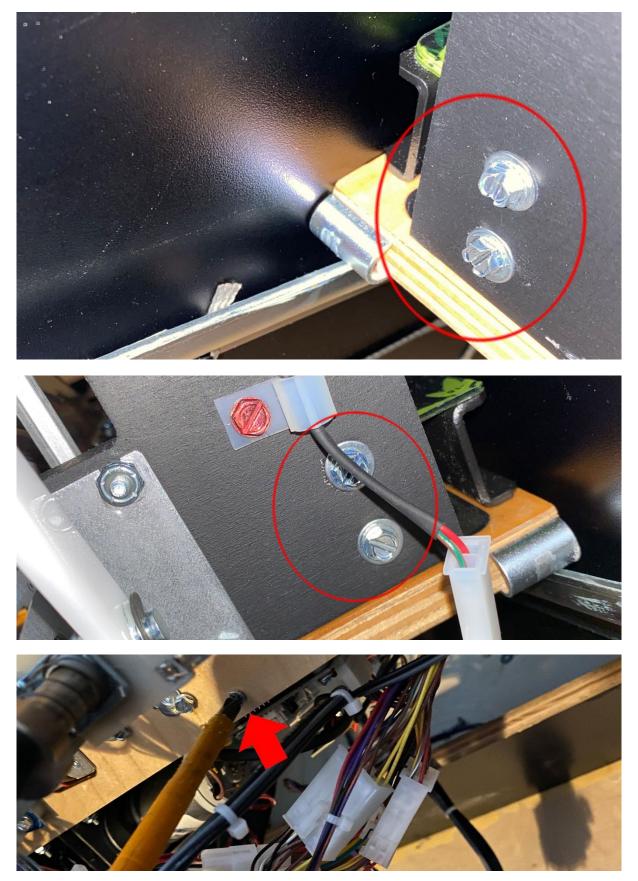

Please place the backboard with the ramp carefully in the cabinet.




Remove the tagged plastic.



At this time it should look like this. There is a gate and a spinner.


You can skillfully thread the protector through – or just uninstall the gate and the spinner.


Please remove the rubbers at the slingshots to avoid damaging the protector during installation.

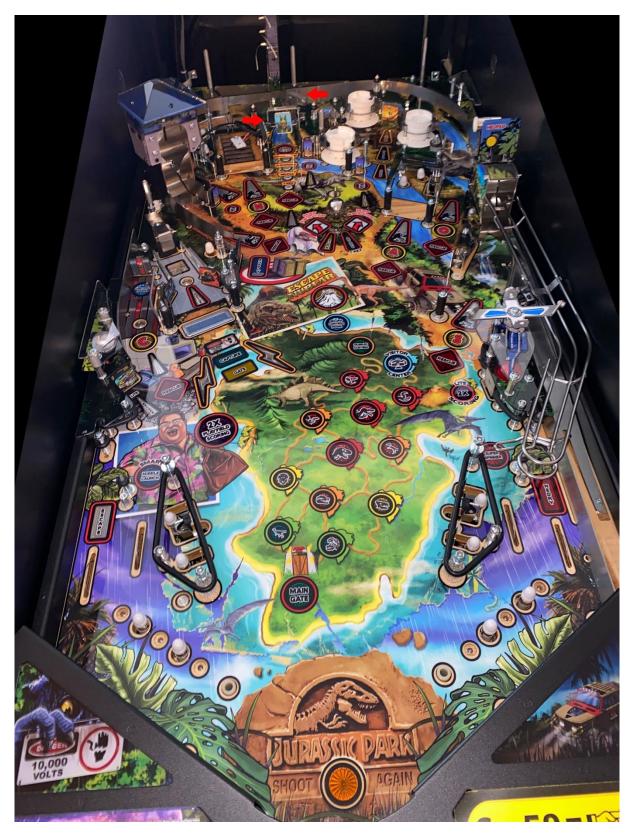




Depending on the protector revision the part behind the target bank can be delivered separately. If so – please remove the protection foil and use mylar or some adhesive tape for fixation (we used crepe to illustrate it).

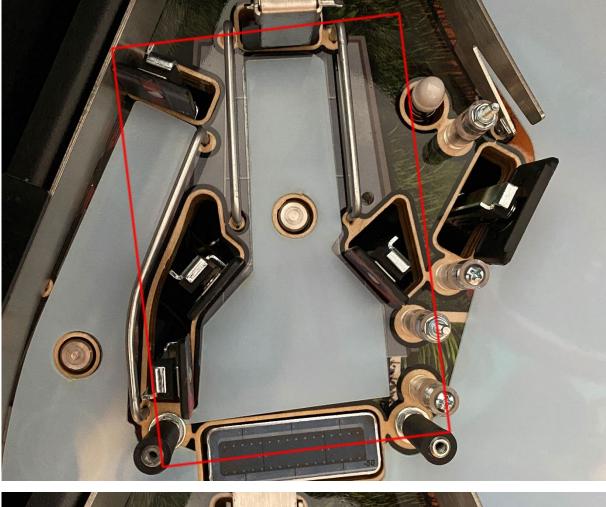

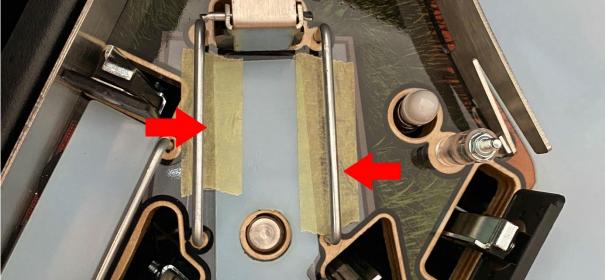




Installed protector...

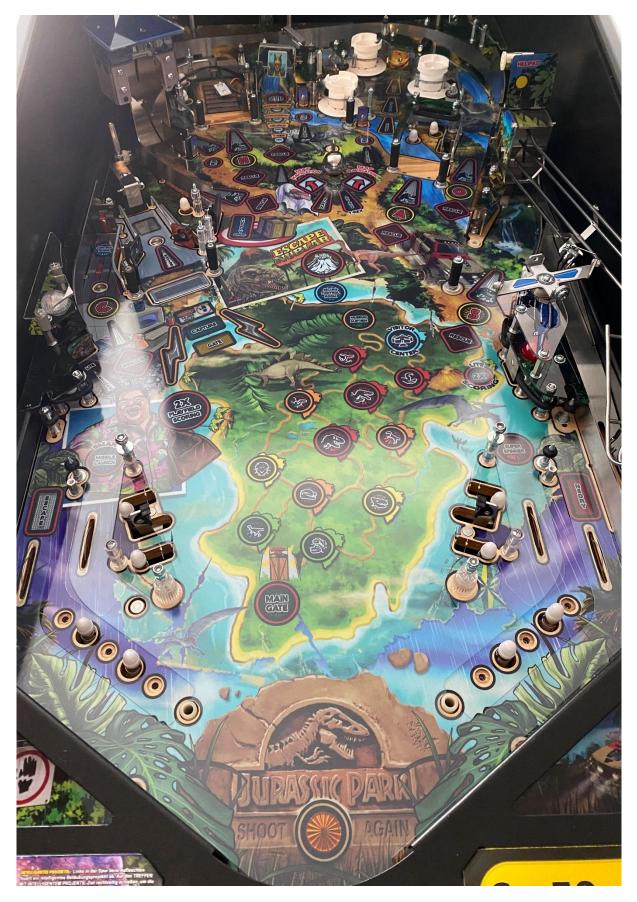



The target bank should be levelled. You can adjust it with the marked screws.

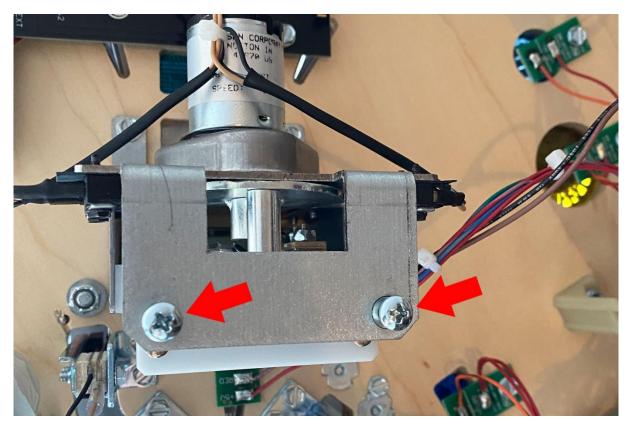

Now you can reinstall everything just in the reverse sequence.

Thank you!